


Feb. 3/25

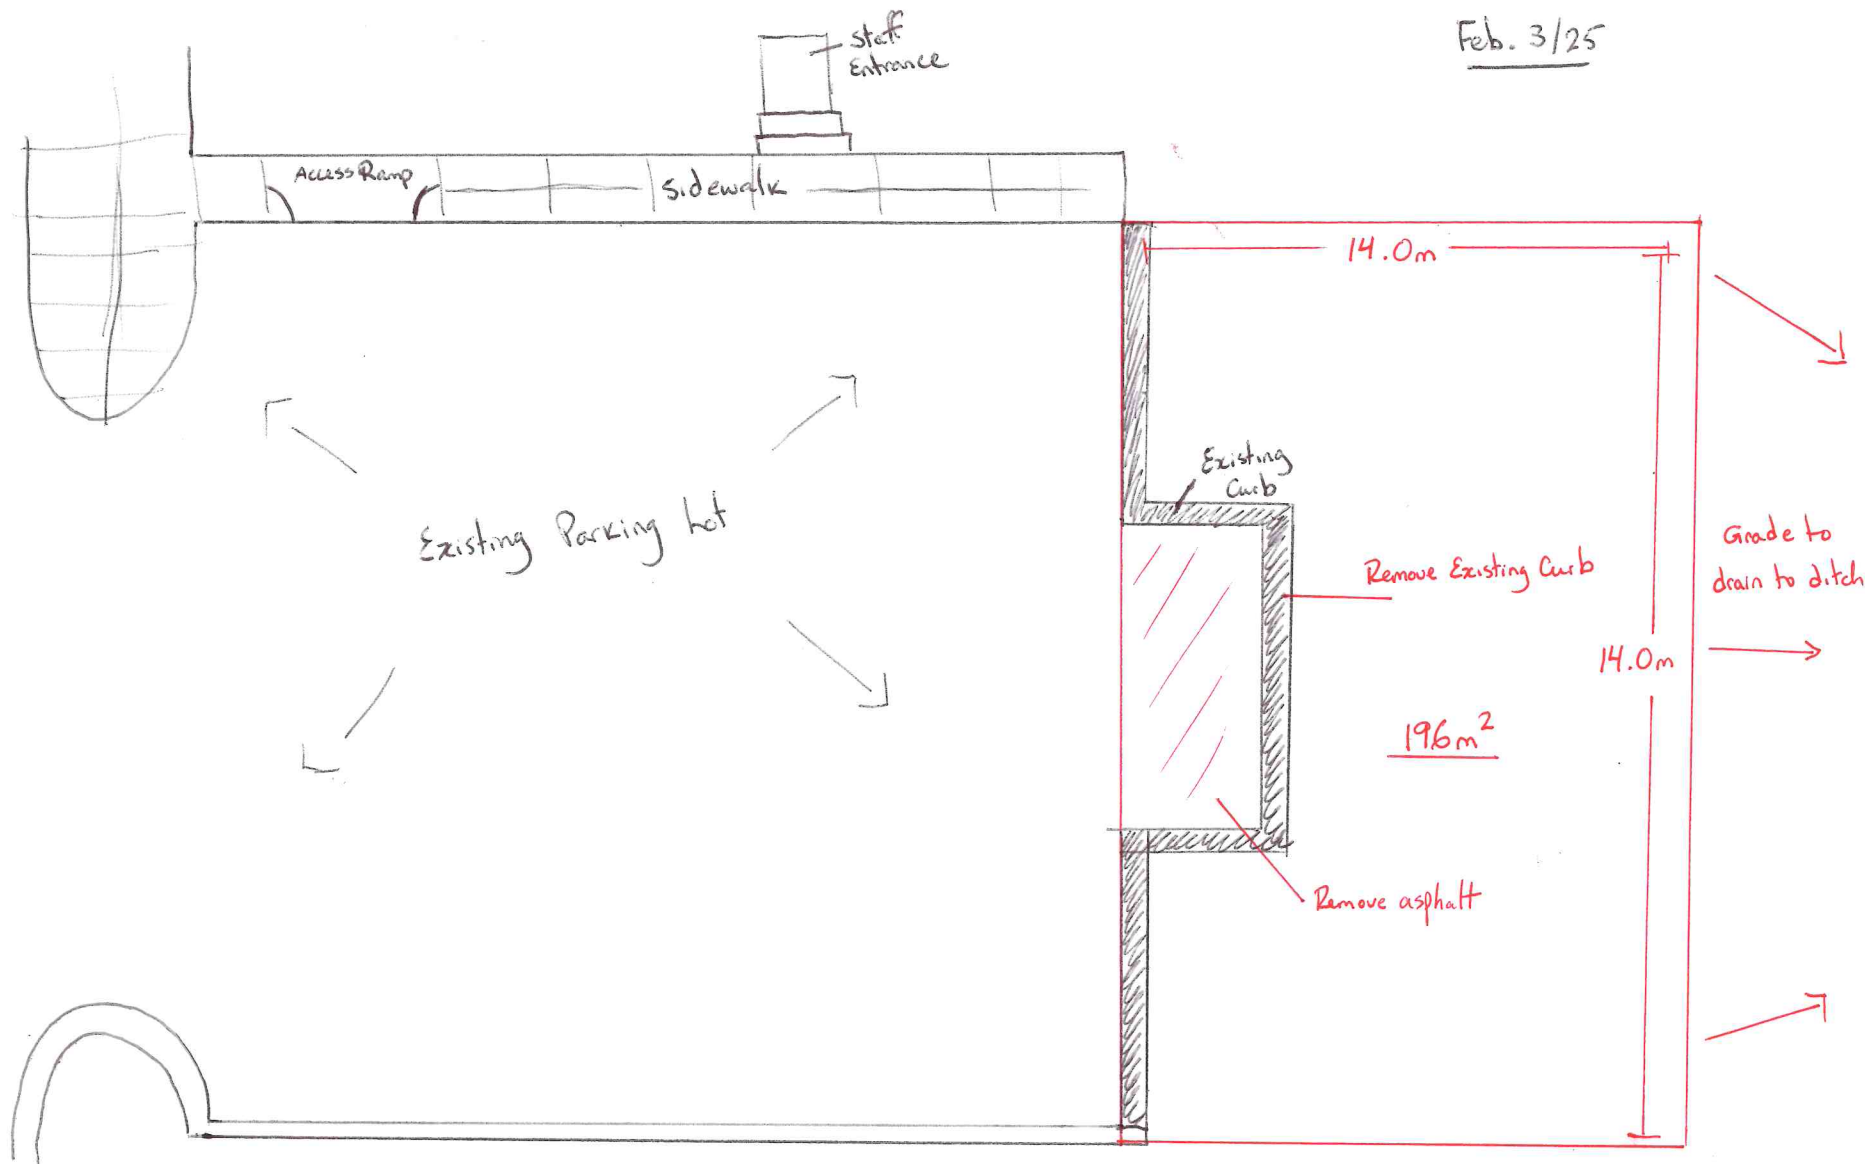

Berwyn Office Parking lot

1. Cut + Remove existing curb + asphalt.
2. Strip grass, save topsoil to one side.
3. Excavate to 0.4m + pack subgrade. (laser level)
4. Backfill w/ 3/4" gravel (175mT).
5. Grade w/ sub steer.
6. Water, pack, regrade, water, pack. } (laser level)
7. Replace topsoil around perimeter + grade for drainage.

E.1.a)iii.